


Thank You!

Thank you for choosing Way Basics! With your help, Way Basics products are helping protect the environment. No new trees were cut down to create our furniture, because it's made from recycled paper. At the end of its long life we hope you'll find other uses for our zBoards or simply recycle – then they might eventually find their way back to Way Basics where we'll make them into new zBoards!


What's Included




Dowel x16



Vertical zBoard x2

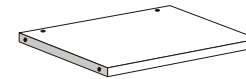


Horizontal zBoard x2




Hook bracket guide
(28.5 x 28.5 cm)



Screws x6

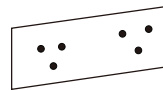


Drilling Template x1

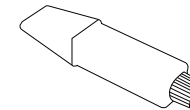


Glue x1




Hook bracket guide
(50 x 28.5 cm)



Backboard x1
(with metal fitting)



Wall Attachment x2



Plastic Anchor x6

Turn this page over to get started!

Connect
With Us




talktous@waybasics.com




Share Your Photos and Win
www.waybasics.com/share

Images below are for the Wall Cube. The Wall Rectangle is the same process


- 1** Apply **glue** into the pre-drilled holes and insert **dowels** into **horizontal zBoards** and **backboard**.

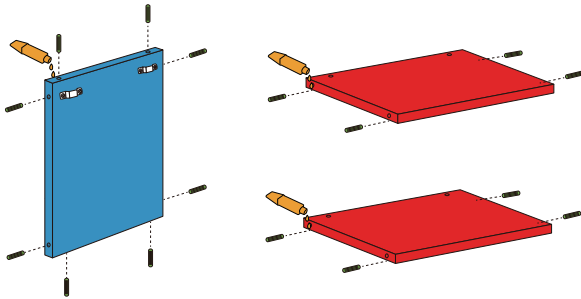


- 2** Remove **protective strips** on **horizontal zBoards** and **backboard**.

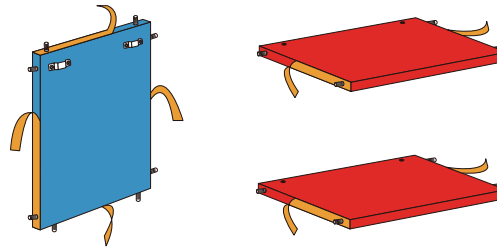


- 3** Assemble the **horizontal zBoards** and **backboard**. Notice that the metal fitting needs to be on the back.

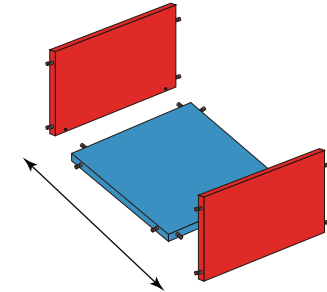


- 4** Assemble the **vertical board**.

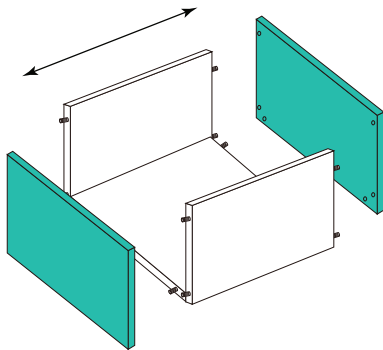


- 5** Level the **guide sticker** and stick it on the wall

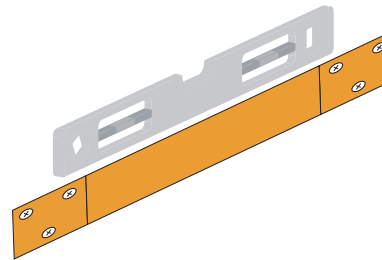


- 6** Drill 6 holes at center of the **ovals**

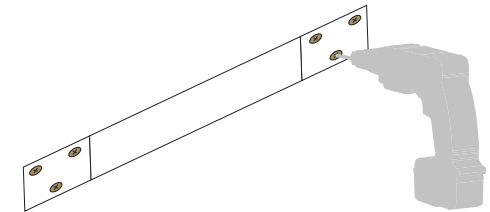

- 7** Insert **anchors** into holes

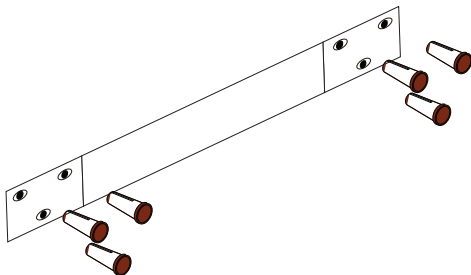

- 8** Fasten **hook brackets** to wall anchors with **screws**

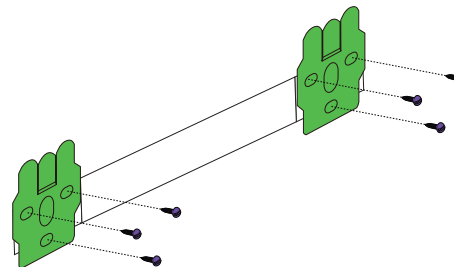

- 9** Hang the **assembled wall cube** on the **hook brackets**

